

NITECORE®

The All-Round Flashlight Expert

EC4GT User Manual

Features

- A rugged, lightweight flashlight made with unibody die-cast technology
- Utilizes a CREE XP-L HI V3 LED
- Maximum output up to 1,000 lumens
- Maximum throw up to 475 meters
- Driven by two rechargeable 18650 Li-ion batteries for runtime up to 380 hours
- Dual switch design offers unprecedented ease of use
- Thumbscrew lock on tailcap doubles as a tripod connector
- 5 brightness levels and 3 special modes available
- Direct access to ultra-low and turbo output
- Features advanced temperature regulation (ATR) technology
- A power indicator built into the on/off switch indicates remaining battery power (Chinese patent NO. ZL201220057767.4)
- An SMO reflector offers blinding and far-reaching beams
- Stainless steel retaining ring protects core components from damage
- Reverse polarity protection
- Toughened ultra-clear mineral glass with anti-reflective coating
- Solid, lightweight aerospace grade aluminum alloy construction
- Waterproof in accordance with IPX8 (2 meters submersible)
- Impact resistant to 1 meter
- Tail stand capability

Dimensions

Length: 6.1" (155mm)
 Head diameter: 1.57" (40mm)
 Tube: 1.57" × 1.12" (40mm×29mm)
 Weight: 6.03oz (171gram) (without battery)

Accessories

Quality holster, lanyard

Battery Options

	TYPE	Nominal voltage	Compatible
18650 Rechargeable Li-ion battery	18650	3.7V	Y (Recommended)
Primary Lithium battery	CR123	3V	Y (Recommended)
Rechargeable Li-ion battery	RCR123	3.7V	Y

Output & Runtime

FL1 STANDARD	TURBO	HIGH	MID	LOW	ULTRALOW	STROBE	LOCATION BEACON	SOS
	1000 LUMENS	420 LUMENS	200 LUMENS	50 LUMENS	1 LUMEN	1000 LUMENS	1000 LUMENS	1000 LUMENS
	2h	4h 45min	10h	25h	380h	—	—	—
	475m	324m	188m	110m	17m	—	—	—
	56500cd	26250cd	8815cd	3030cd	78cd	—	—	—
	1 m (Impact Resistant)							
	IPX8, 2m (Waterproof AND Submersible)							

NOTICE:

The stated data has been measured in accordance with the international flashlight testing standards ANSI/NEMA FL1, using 2 x18650 Li-ion batteries (3.7V, 3400mAh) under laboratory conditions. The data may vary in real-world use due to different battery usage or environmental conditions.

Operating Instructions


Battery Installation

As illustrated, rotate the thumbscrew lock counterclockwise and screw the tail cap off. Insert batteries with the negative (-) ends contacting the springs, and then tighten the thumbscrew lock clockwise.

NOTE: After battery insertion, the power indicator light will blink to indicate remaining battery power. Please refer to the "Power Tips" section of this manual for details.

WARNING:

1. Do not mix rechargeable and non-rechargeable batteries.
2. Do not mix batteries of different types/brands.

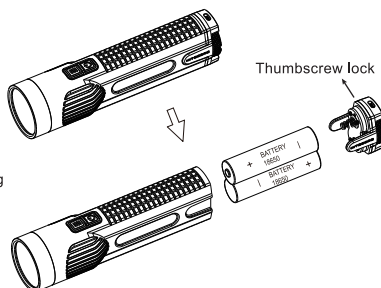

On/Off Operation

To switch on: Press the on/off switch to turn the light on

To switch off: Press the on/off switch again to turn the light off and enter standby mode

Standby Mode

With the light turned on, press and hold the on/off switch for over one second to turn the light off and activate the power indicator to blink once every three seconds, thus helping users locate the EC4GT in dark environments. When powered by 2x18650 batteries, the EC4GT can operate for over 6 months with the power indicator on, or remain on standby for over 12 months with the power indicator off.

Brightness Levels

With the light turned on, press the mode switch repeatedly to cycle through brightness levels of ultralow, low, medium, high and turbo. This mode has memory effect that ensures direct access to the brightness level last used.

Direct Access to Ultralow/Turbo

With the light turned off, press and hold the on/off switch for over one second to enter ultralow level (1 lumen).

With the light turned off, press and hold the mode switch for over one second to enter turbo level (1000 lumens).

Special Modes (Strobe/Location Beacon/SOS)

With the light turned on, press and hold the mode switch for over one second to enter strobe mode. To cycle through location beacon/SOS/strobe modes, press and hold the mode switch for over one second again. To exit, press the on/off switch to turn the light off.

Strobe Ready

With the light turned off, press the mode switch twice in quick succession to enter strobe mode directly. To exit, simply press any switch to turn the light off.

Lockout/Unlock

With the light turned on, press and hold both switches for over one second to turn the light off and enter lockout mode. In this mode, the two switches will not have their respective functions, thus preventing accidental activation. To unlock, press and hold both switches for over one second again.

NOTE:

1. When in lockout mode, the EC4GT will remain operational using 2x18650 batteries for over 12 months.
2. When the EC4GT is kept in a backpack or left unused for extended periods, Nitecore recommends batteries are removed to cut off power entirely and thus prevent battery leakage or accidental activation.

Power Tips

After battery installation or with the mode switch being pressed when the light is off, the blue power indicator built into the switch will blink to indicate remaining battery power. The power indicator will blink three times when power levels are above 50%; twice when power levels are below 50%; and once when battery is close to depletion.

ATR Technology

Advanced temperature regulation (ATR) technology allows the EC4GT to dynamically adjust output performance according to its internal temperature. This prevents damage from overheating and prolongs its working life.

Changing / Charging Battery

Batteries should be replaced or recharged when output appears to be dim or the flashlight becomes unresponsive.

Maintenance

Every 6 months, threads should be wiped with a clean cloth followed by a thin coating of silicon-based lubricant.

Warranty Details

Our authorized dealers and distributors are responsible for warranty service. Should any problem covered under warranty occurs, customers can contact their dealers or distributors in regards to their warranty claims, as long as the product was purchased from an authorized dealer or distributor. NITECORE's Warranty is provided only for products purchased from an authorized source. This applies to all NITECORE products.

Any DOA / defective product can be exchanged for a replacement through a local distributor/dealer within the 15 days of purchase. After 15 days, all defective / malfunctioning NITECORE® products can be repaired free of charge for a period of 60 months (5 years) from the date of purchase. Beyond 60 months (5 years), a limited warranty applies, covering the cost of labor and maintenance, but not the cost of accessories or replacement parts.

The warranty is nullified if the product(s) is/are broken down, reconstructed and/or modified by unauthorized parties, or damaged by batteries leakage.

For the latest information on NITECORE® products and services, please contact a local NITECORE® distributor or send an email to service@nitecore.com.

※ All images, text and statements specified herein this user manual are for reference purpose only. Should any discrepancy occurs between this manual and information specified on www.nitecore.com. Sysmax Industry Co., Ltd. reserves the rights to interpret and amend the content of this document at any time without prior notice.



SYSMAX Industry Co., Ltd.

 
TEL: +86-20-83862000

FAX: +86-20-83882723

E-mail: info@nitecore.com

Web: www.nitecore.com

Address: Rm 2601-06, Central Tower, No.5 Xiancun Road, Tianhe District, Guangzhou, 510623, Guangdong, China



Thanks for purchasing NITECORE!